



BUMBLERIDE FLITE

ASSEMBLY
OPERATION
MAINTENANCE

bumbleride[®]

Questions about your Bumbleride?
We'd love to hear from you.

Within the US:

Phone: 1-800-530-3930
E-mail: info@bumbleride.com

FLITE WARNINGS

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING THIS STROLLER, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED

Please note the following:

READ ALL INSTRUCTIONS BEFORE USING THIS STROLLER! WHEN ASSEMBLING THIS STROLLER, ENSURE CHILDREN ARE A SAFE DISTANCE AWAY! ALWAYS ENSURE CHILDREN ARE A SAFE DISTANCE AWAY WHEN OPENING AND CLOSING STROLLER!

WARNINGS

-  - Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.
-  - NEVER LEAVE YOUR CHILD UNATTENDED!
-  - ALWAYS ENSURE CHILDREN ARE A SAFE DISTANCE AWAY WHEN OPENING AND CLOSING STROLLER!
-  - Always use complete 5 point safety harness to avoid serious injury by falling or sliding out of the stroller.
-  - Never overload the stroller. This product is designed for a child whose maximum weight is 50 lbs. (22 kg) per seat and whose maximum height is 43 in. (110 cm) per seat.
-  - Always use the brakes when not holding the stroller.
-  - Excess weight may cause hazardous or unstable condition to exist. Never allow more than one child per seat in the stroller.
-  - Never leave children in the stroller when folding the stroller. Make sure children are clear of all moving parts when making any adjustment to the stroller.
-  - Never leave children in the stroller when using stairs or escalators.
-  - Child may slip into leg openings and strangle. Never use in reclined carriage position unless the safety harness is used to secure the child.
-  - Do not leave stroller exposed to heat for long periods of time.
-  - Do not fold stroller when wet.
-  - Parcels and/or accessory items placed on the stroller may cause it to become unstable.
-  - Unstable and/or hazardous conditions may exist if accessories/attachments other than Bumbleride products are added to the stroller.
-  - Do not hang shopping bags from the handle as this may affect the stability of the stroller. Always use the basket provided. Maximum weight capacity of basket is 11 lbs. (5 kg). Any pouch or pocket provided with this unit is designed to carry a maximum weight of 0.4 lbs. (0.2 kg).
-  - Care must be taken when folding and unfolding the stroller to prevent finger entrapment.
-  - Ensure that all locking devices are engaged before use of the stroller.
-  - This product is not suitable for running or skating.

MAINTENANCE

This stroller requires regular maintenance. Regularly check for loose rivets, loose screws and/or broken parts, etc. Check all safety devices and brakes to ensure all are functioning properly. Clean and lubricate the stroller frame and moving parts. The removable seat fabric can be machined-washed using cold water only. The canopy fabric can be spot cleaned. DO NOT machine-dry any fabric part. Please note the weight capacity for this product is 50 lbs. (22 kg). As a part of continuous product development, Bumbleride reserves the right to make design changes without any notice or obligation.

SAVE THIS OPERATING MANUAL

SAFETY STANDARD

This product is manufactured in compliance with ASTM F833-07 (Standard Consumer Safety Performance Specifications for Carriages/Strollers) as well as EN 1888 (Child Care Articles, Wheeled Child Conveyances Safety Requirements and Test Methods).

BUMBLERIDE LIMITED WARRANTY

Bumbleride Inc. ("Bumbleride") guarantees its products, when owned by the original customer, to be free from defects in materials and/or defects caused by workmanship for one year from the original date of purchase. The warranty card must be returned with proof of purchase in order to activate the warranty period. You may also register your Bumbleride online by visiting www.bumbleride.com.

This warranty does not cover damage caused by normal wear and tear, neglect, accidents, lack of maintenance or damage caused by parts not manufactured by Bumbleride.

This warranty covers Bumbleride products purchased from authorized Bumbleride dealers only. A list of authorized dealers can be found by visiting www.bumbleride.com.

All warranty claims must be made directly to the authorized Bumbleride dealer from whom the product was purchased. All costs associated with shipping and handling are the responsibility of the customer. Upon receipt of the product, Bumbleride or its authorized repair center, will arrange for inspection of the item. If the problem is due to defective parts or defective workmanship on behalf of Bumbleride, Bumbleride will repair or replace the product at Bumbleride's option. If the product is not covered under the original warranty, the customer will be responsible for all expenses associated with the service provided.

MANUAL CONTENTS

- 1 *Warnings & Maintenance*
- 2 *Safety Standard & Warranty*
- 3 *Manual Contents & Box Contents*
- 4 *Opening frame*
- 5 *Opening frame*
- 6 *Opening frame*
- 7 *Attaching wheels*
- 8 *Attaching wheels*
- 9 *Operating brakes*
- 10 *Locking front wheels*
- 11 *Attaching the canopy*
- 12 *Operating the canopy*
- 13 *Adjusting backrest*
- 14 *Adjusting footrest*
- 15 *Using 5-point safety harness*
- 16 *Attaching optional cup holder*
- 17 *Attaching the optional shoulder strap*
- 18 *Installing an optional car seat*
- 19 *Installing an optional car seat*
- 20 *Removing fabric*
- 21 *Folding Flite*
- 22 *Folding Flite*
- 23 *Attaching the accessory rain shield*

BOX CONTENTS



Opening frame:

Please ensure that your child is a safe distance away before unfolding the Flite frame. Begin by standing the frame up with the handles on the upper side (1). Release the folding locks by pulling up on the handle triggers (2).

1



2



Gently shake the frame forward to open and pull the handles down to lock into place (3).



Using your foot, engage the rear frame support bars (4).



Attaching wheels:

Locate the two rear wheels. These wheels have brake kick pads attached (1). Slide them onto the rear legs of the Flite frame so that the brake kick pads are facing outwards (2). You will hear a click notifying you that they are engaged.

1



2



Locate the two front wheels. These wheels have light grey tabs installed, used for locking the front wheels in line (3). Slide them onto the front legs of the Flite frame (4). You will hear a click when they have engaged.

3



4



Operating brakes:

To engage the Flite in a parked position, press down on the rear brake kick pads until the brakes engage (1).
Warning: Never leave child unattended in stroller.




Locking front wheels:

To engage the front wheels in the in-line position, simply lift up on the grey tab until it locks into place (1).



Attaching the canopy:

Locate the canopy holsters on the frame of your Flite (1). Slide the canopy clips into the holsters to lock into place. Attach the side snaps of the canopy to the seat body of the stroller (2).

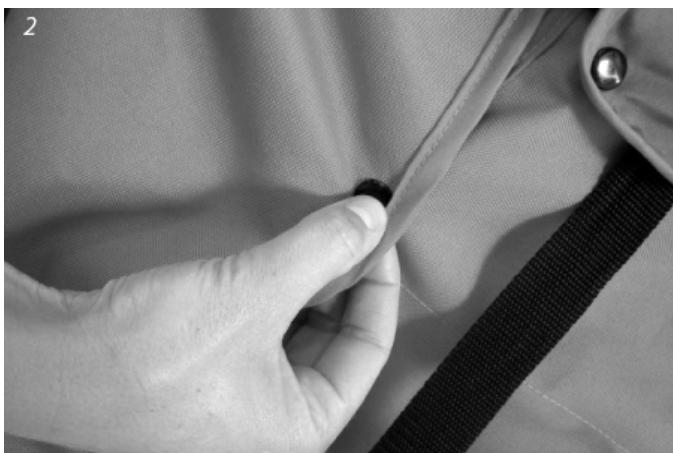

Operating the canopy:

Pull the canopy forward to provide sun coverage (3). The rear portion of the canopy can be removed using the attached zipper (4).



Adjusting backrest:

To recline the backrest, simply squeeze the adjuster's button and pull downward (1). The backrest will fall into place. To raise, pull the d-ring downward and squeeze the adjuster up to the desired position.



Adjusting footrest:

Flite utilizes a 3-position adjustable footrest. To adjust the footrest, locate the adjuster buttons on each side of the footrest underneath the lower seat fabric and adjust to your desired position (1).



Using 5-point safety harness:

Insert buckles A and B into either side of buckle housing C until they click into place. Carefully adjust the shoulder, waist and front center straps to snugly fit your child. Please note that the shoulder straps can be adjusted to better accommodate your child as well. They can be re-threaded through the slits in the backrest.




Attaching optional cup holder:

Locate a dime-sized steel knob on either side of the stroller handle. Press the plastic cup holder onto the knob and pull downward so that the cup holder locks into place (1).



Attaching the optional shoulder strap:

To begin, locate the black plastic housing on the center of the handle support (1). Thread the long end of the shoulder strap through the slit in the housing and secure with the plastic adjuster (2). The shorter ends of the shoulder strap attach to the rear legs of the frame (3). Wrap each end around its respective leg and secure by using the attached metal hardware (4).

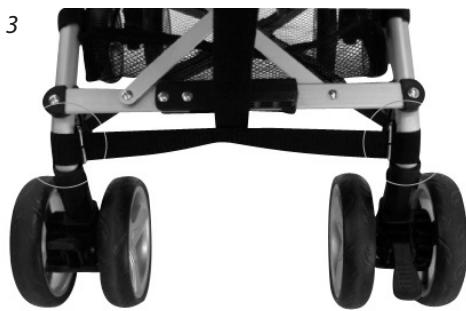

Installing an optional car seat:

WARNING: Some car seats will not be compatible with this stroller. To verify whether your car seat is compatible, install the car seat WITHOUT our child in the car seat. Visit www.bumbleride.com to find a listing of current compatible car seats.

Improper installation of a car seat in this stroller may result in serious injury or death. Read the manual included with your car seat before using it with your stroller. Always secure your child with the car seat harness when using a car seat in the stroller.

Always ensure that the safety belt is secured around the car seat before use.

Locate the infant seat adapter bar holsters on either side of the stroller (1). Install the bar into the stroller (2).



Fully recline the back rest to the flattest position. Attach the safety belt to both d-rings on the inside of the stroller (3). Leave the strap unbuckled. Place the car seat inside the seat of the stroller so that the back of the car seat rests along the infant seat adapter bar (4). Bring the safety belt over the car seat and buckle in place. Tighten the safety belt. Lift up on the car seat to ensure that it is secure. Lift the backrest to its most upright position. Lift the footrest to its most upright position.




Removing fabric:

Unsnap the side wall fabric on both sides of the frame (1). Detach the Velcro strap under the seat and behind the backrest (2). Detach the harness so that the shoulder straps can slide through the backrest slits. Gently pull the seat fabric off. The seat fabric can be machine washed using cold water on the delicate cycle. The canopy can be spot-cleaned, do not machine wash.



Folding Flite:

Warning: Ensure that your child is a safe distance away before folding the stroller. Ensure that any bar accessories that may be installed on the Flite (Snack Pack, infant seat adapter bar) are removed before folding. Begin by collapsing the canopy. Using your index fingers, pull up on the release triggers found on the handle (1). Using your foot, release the rear support bars by gently kicking the kick pad upwards (2).

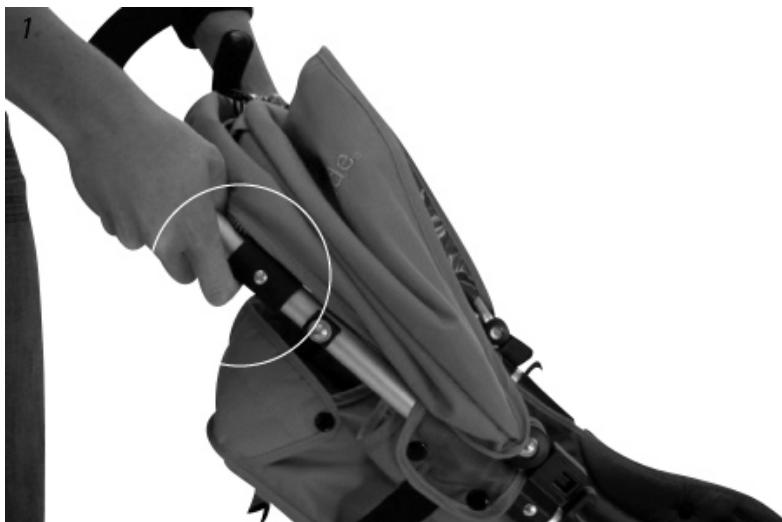

Press the handles forward and down toward the ground (3). As the Flite collapses you will notice that the center support bar on the handles fold as well. When the stroller is folded, the folding locks will engage, keeping the stroller locked (4). Do not tighten the backrest adjuster after folding. Tightening the adjuster can make it difficult to open the stroller. When opening the stroller again, ensure that the backrest adjuster has been loosened.

3



4



Attaching the accessory rain shield:

Begin by unfolding the packaged rain shield and placing it over the Flite. Pull the upper flaps through the handle openings (1). Notice the Velcro attachments on both sides of the flaps. Secure the Velcro attachments found on the upper flap to the corresponding attachments on the sidewalls of the rain shield. Secure the Velcro loops around the front portion of the frame (2).

Warning: Do not use the accessory rain shield with Queen B model when accessory Toddler Seat is attached.

